

Introduction

Congress Rental supplies a Standard Kit, which has been fully charged at the warehouse before delivery.


The Standard Kit contains:

- 1 x Headset microphone for the transmitter
- 1 x Transmitter
- 20 x Earpieces
- 20 x Receivers
- Power Supply
- Cap for charging port on the left side



Transmitter

Receiver

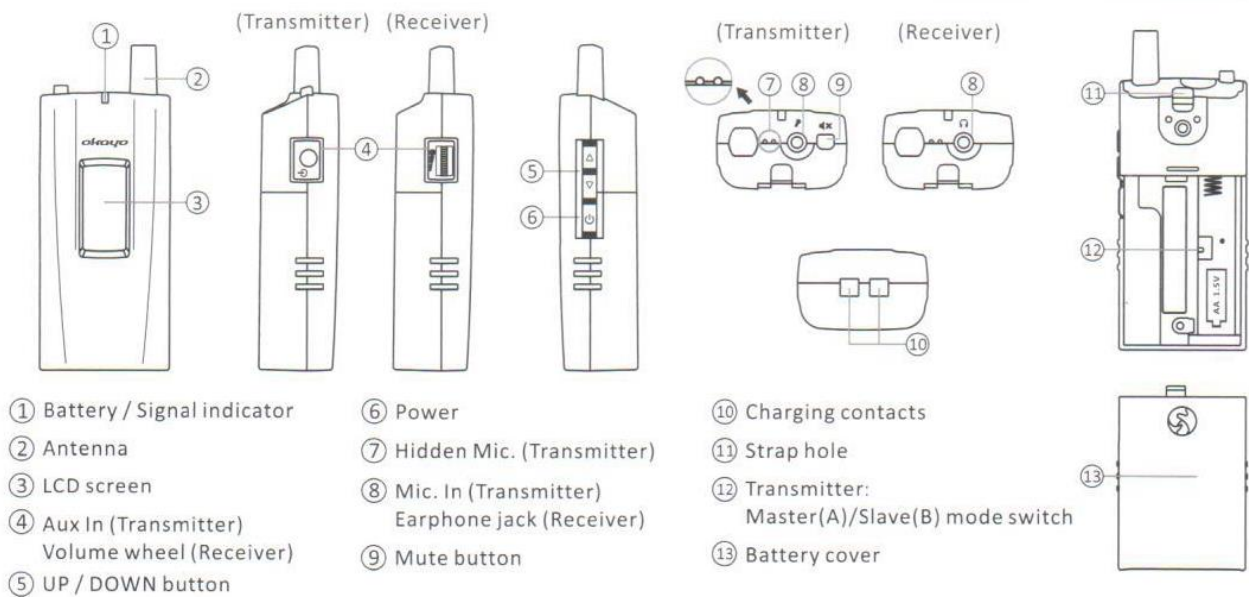

The Transmitter (for the Speaker)

1. Turn the unit on by pressing and holding the power button on the right side of the unit for 5 seconds. (If unit doesn't operate ensure it is charged and a battery inserted).
2. Ensure the Transmitter is in "A" mode on the LCD Screen (Switch 12 on the above drawing needs to be selected to the default down position)
3. Change the channel number so that the transmitter and the associated receivers are all on the same channel.
4. Holding both of the channel select buttons (Item 5 on the above drawing) unlocks the unit, so you can change the channel.
5. Plug your head worn microphone into the socket on **the top** of the transmitter. (Note that the socket on the side of the device is for a line level input.)

6. Ensure the mute button is off. If the blue light is flashing, then **mute is on**.
7. This unit is now ready to be used.
8. To turn the unit off, press and hold the “Power” button for 5 Seconds

Notes:

- A red light indicates low power in the battery, Charge unit or replace the disposable battery.
- Charge all units overnight after each day of use. Or replace batteries after each day, if using disposables

The Receivers (for the Audience)

1. Turn the unit on by pressing and holding the power button on the right side of the unit for 5 seconds. (If unit doesn't operate ensure it is charged and a battery inserted).
2. Plug the earpiece into the socket on top of the receiver.
3. Ensure the receiver is set to the correct channel number (as displayed on front of transmitter). Be patient when first turning the unit on, it may take up to a minute for the channel number to display on front panel.
4. Holding both the channel select buttons (Item 5 on the above drawing) unlocks the unit to enable channel changing.
5. To change the volume, use the spindle on the left side.
6. To turn the unit off, press and hold the “Power” button for 5 Seconds



Congress Rental Tour Guide System – Quick Start Guide

Notes:

- A red light indicates low power in the battery, Charge unit or replaces disposable battery.
- Charge all units overnight after each day of use. Or replace batteries after each day, if using disposables

Charging Transmitters and Receivers

At the end of each day of use, all receivers and transmitters need to be charged for the next day. Please allow up to 9 hours for charging.


1. Remove the cap on the left-hand side of the case
2. Remove any earpieces and microphones from the charging unit; the case must remain open while charging.
3. Place the units into the charging bay; connect the power supply to charger and wall socket.
4. A solid red light on the case indicates charging. If no red light appears, check the power leads are pushed in properly.
5. When the charging unit lights are green, they are fully charged and ready to be used.

Notes:

- Units that are low on power show a red light on the unit.
- If a unit light is flashing red then the system is not charging the unit, pull the unit out and re-insert or move it to a different bay until a solid red light indicates proper charging.



Charging (Lights are solid red)

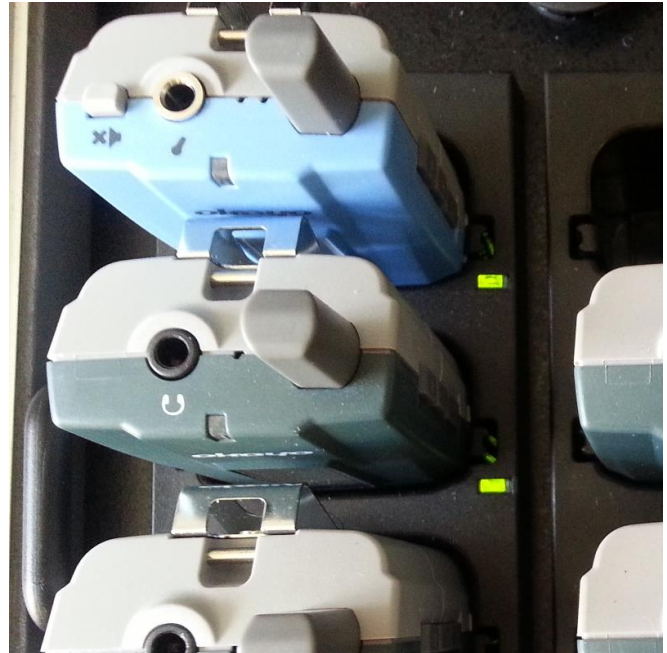

Fully Charged (Lights are green)

Two Transmitters A & B Mode

A & B Mode is for when two Tour Guides / Interpreters are sharing the workload and sharing a channel

1. The first transmitter must remain set to A the second transmitter must be set to B.
2. The Transmitter set to A mode is the default. A transmitter set to B mode can then be added to that channel, to provide a second Tour Guide / Interpreter.
3. The A/B switch is located behind the battery, within the battery compartment. (See the picture below)



Frequently Asked Questions:

What does the blue flashing light on transmitter mean?

The unit is muted; depress the Mute button on the top of the unit.

The receiver is not displaying the channel number?

It can take up to 1 minute for the channel number to display.

The transmitter is on but not working?

Check the mute button is not pressed in.

Check the headset is plugged into the correct socket (top).

Contact

Follow the steps detailed above for the correct operation of the system. If after reading through the manual you still have problems, please contact:

Congress Rental: 02 9808 6466.

Urgent calls outside of business hours can be made to:

Daniel Soury - 0425 384 791

Liam Ennis - 0402 932 984